

FX-3000 Korea Version

Set Date/Time	When first time insert batteries (or on-hook mode press and hold 'DEL' + 'DOWN' keys), Set time/date by press 'UP' or 'DOWN' to set correct time/date, press 'DEL' to finish this setting and go to the 'long distance' setup.
Set Long Distance	Press 'UP' or 'DOWN' to set the long distance number. Press 'DEL' to finish and go to the 'AREA CODE' setup.
Set Area Code	Area code setup. When "----" displayed. Press 'UP' or 'DOWN' to set the correct first digit of your local area code. Press 'DEL' to move to the next digit. After set the last digit, press 'DEL' to finish and go to LCD contrast setup. (Hong Kong – 852)
Set LCD Contrast	Press 'UP' or 'DOWN' to adjust LCD contrast. Press 'DEL' to finish all the setting.
Store two touch memory	Press 'STORE' button, and enter the telephone number, press 'STORE' button, press the memory location (0 to 9) on the keypad to complete.
Memory dialing	Pick up the handset to make your call. Press 'MEMORY' button, and press the memory location (0 to 9).
Call back (REDIAL) from the Caller ID Memory	Press 'UP' or 'DOWN' button to select the Caller ID number, press 'CALL BACK' button. The speaker will automatically on and make your phone call. (For FX-3000, you must pick up the handset first, and press 'CALL BACK' button to make the phone call.)
Erase stored telephone number	1. To erase stored telephone number in 0 to 9 – you have to store a new number. 2. Other memories (VIP, Caller ID), press 'DEL' button, LCD shows "dEL ?" press 'DEL' button again to erase.
Setting call time	Call time is automatically activated after dialing 8 seconds. And automatically activate when receiving a call.
Redial and Pause	Pick up handset, press 'REDIAL' button to redial last number called. Press any number, after press 'REDIAL' button is pause (4 seconds).